



# **TELECOM R880H**

## **3G Smart Phone**

### **User Manual**

## About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

**Copyright © 2013 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

### **Notice**

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter [For Your Safety](#) to be sure to use your phone properly and safely.

## Disclaimer


ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software. Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*<sup>®</sup> trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

The microSD logo  is a trademark of the SD Card Association. Other trademarks and trade names are the property of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

**Version No. : 1.5**

# Contents

 
Getting Started .....	6
Personalizing.....	17
Knowing the Basics.....	23
To switch the keyboard layout: .....	30
Connecting to Networks and Devices.....	36
Phone Calls .....	50
People .....	62
Accounts .....	69
Email .....	71
Gmail.....	76
Messaging .....	81
To delete message threads: .....	84
Calendar .....	86
Google Talk.....	89
Google+ .....	92
Browser .....	95
Maps, Navigation, and Local.....	101

 
<b>Camera .....</b>	<b>106</b>
<b>Gallery .....</b>	<b>109</b>
<b>Music .....</b>	<b>113</b>
<b>Video Player .....</b>	<b>119</b>
<b>FM Radio .....</b>	<b>121</b>
<b>Sound Recorder .....</b>	<b>123</b>
<b>More Apps .....</b>	<b>124</b>
<b>Play Store .....</b>	<b>127</b>
<b>Settings .....</b>	<b>129</b>
<b>Upgrading the Phone Software .....</b>	<b>139</b>
<b>Troubleshooting.....</b>	<b>140</b>
<b>Technical Specifications .....</b>	<b>146</b>
<b>For Your Safety .....</b>	<b>148</b>
<b>Disposal of Your Old Device .....</b>	<b>160</b>

# Getting Started



# Getting to Know Your Phone

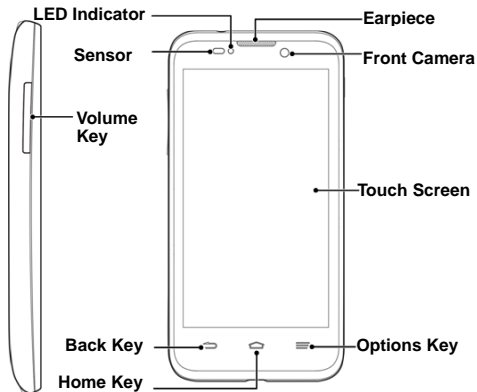

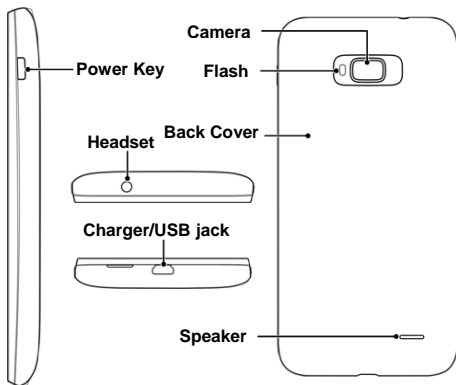

## Knowing the Keys

Key	Function
Power Key	<ul style="list-style-type: none"> <li>Press and hold to turn on or off Flight mode, reboot, enable silent mode, vibration mode or sound, or to power off.</li> <li>Press to switch your phone to Sleep mode.</li> <li>Press to wake up your phone.</li> </ul>
Home Key	<ul style="list-style-type: none"> <li>Touch to return to the Home Screen from any application or screen.</li> <li>Touch and hold to open Google Search</li> </ul>

 


Key	Function
Options Key	Touch to get the options for the current screen.
Back Key	Touch to go to the previous screen.
Volume Up/ Down	Press or hold to turn the volume up or down.


## Installing the SIM Card and Battery

Switch off your phone before installing or replacing the battery or the SIM card.

1. Remove the back cover using the thumb catch at the base.

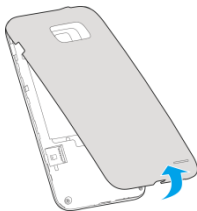


 2. Insert the SIM card as shown and slip it into the card holder.

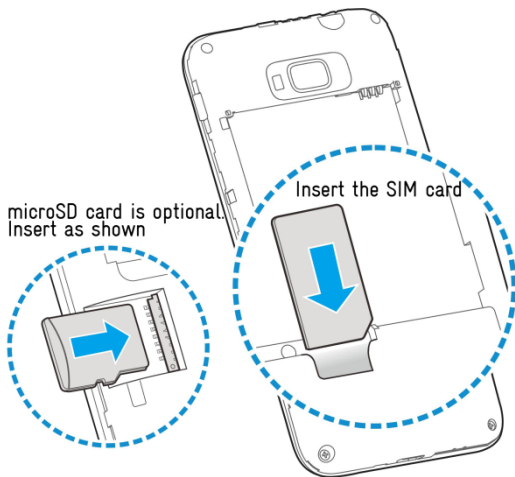

3. Inserting a microSD card is optional but will provide increased memory capacity and enable certain extra features such as data back ups. Insert the microSD card with the metal contacts facing down and slide it in. The microSD card can be installed and removed while the phone is turned on. [Unmount the microSD card](#) before removing it.
4. Insert the battery by aligning the metal contacts on the

 battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

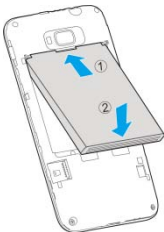

5. Press the cover gently back into place until you hear a click.



## Charging the Battery

When you get your new phone, you'll need to charge the battery. If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

**WARNING!** Only use ZTE approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery or handset damage.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as  or  , appear on the status bar.
3. Disconnect the charger when the battery is fully charged.

## Powering On/Off

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

## Setting Up for the First Time

When you first power on your phone or after you have reset to factory settings (see [Settings – Personal – Backup and reset](#)), you need to step through the Android wizard before use .

1. Touch the language field to select the language you want to use and then touch **Start**.

2. Select Wi-Fi, or touch **Skip**.
3. If you use Gmail, touch **Yes**.
4. Touch **No** to create a new Google account.  
You can also touch **Not now** to set up an account later.
5. Configure the Google location options and touch the forward arrow to continue.
6. Enter your name which the phone uses to personalize some apps and touch the forward arrow to continue.
7. You will be prompted to accept the terms of Google service.  
Touch the forward arrow to continue
8. Touch **Finish** to complete the setup.

**NOTE:** If the SIM is not installed, the phone would prompt you to connect to a Wi-Fi network before asking you to sign in to a Google account.

## Locking/Unlocking the screen

Your phone allows you to quickly lock the screen and keys (put the phone to sleep mode) when not in use and to turn the screen back on and unlock it when you need it.


### To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power Key**.

**NOTE:** To save battery power, the phone automatically turns off the screen after a certain period of idle time. You can still receive

messages and calls while the phone screen is off.

### **To unlock the screen and keys:**

1. Press the **Power Key** to turn the screen on.
2. Touch and hold  at the centre of the screen.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter [Personalizing – Protecting Your Phone With Screen Locks](#)), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Touch**  
When you want to type using the onscreen keyboard, select onscreen items such as application and settings icons, or press onscreen buttons, simply touch them with your finger.
- **Touch and Hold**  
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- **Swipe or Slide**  
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag**  
To drag, press and hold your finger with some pressure

before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

- Pinch

 
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

# Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

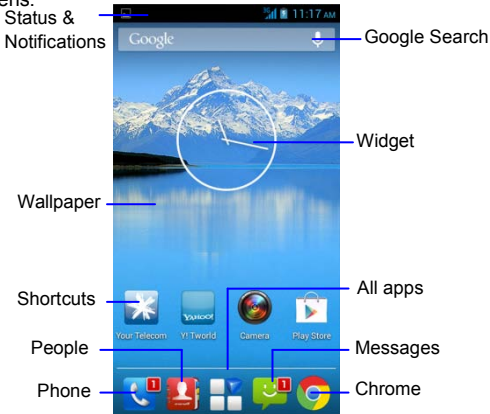

## Extended Home Screens

Your home screen extends beyond the initial screen. Swipe left or right on the screen to see the extended Home Screens.



# Personalizing

## Changing the System Language


1. Touch the **Home Key > Options > System settings > Language & input > Language**.
2. Select the language you need.

## Setting the Date and Time

1. Touch the **Home Key > Options > System settings > Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

## Changing Ringtone and Notification Sound


Customize the default ringtone for incoming calls and default notification sounds:

1. Touch the **Home Key > Options > System settings > Audio profiles > General > Touch the Settings icon** . 
2. Touch **Voice call ringtone**, **Video call ringtone** or **Default notification**.

3. Select the ringtone you want to use.
4. Touch **OK**.

**TIP:** See chapter [\*People – Editing Contacts – Set a Ringtone for a Contact\*](#) for how to assign a special ringtone to an individual contact.

## Turning On/Off Touch Sounds

1. Touch the **Home Key > Options > System settings > Audio profiles > General > Settings** .
2. Check or uncheck **Touch sounds**.






## Adjusting Volumes

1. Touch the **Home Key > Options > System settings > Audio profiles > General > Settings**  **> Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Touch **OK** to save.

**TIP:** You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Key**. If no media application is active, press the **Volume Up/Down Key** to adjust ringtone volume (or the earpiece volume during a call).

## Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods.

- Press and hold the **Power Key** and then touch  to enable silent mode, touch  to enable silent mode with vibration, or touch  to disable silent mode.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears in the status bar, the phone is set to silent mode with vibration. When the  icon appears in the status bar, the phone is in silent mode.
- Touch the **Home Key > Options > System settings > Audio profiles > Silent**.

## Applying New Wallpapers

You can set the wallpaper for the Home Screen or Lock Screen.

1. Touch the **Home Key > Options > Wallpaper**.
2. Select a wallpaper source from **Gallery**, **Live Wallpapers**, **Video Wallpaper**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
3. Touch **Set wallpaper**.

**NOTE:** **Live Wallpapers** are not available for the Lock Screen.


## Changing Screen Brightness

1. Touch the **Home Key > Options > System settings > Display > Brightness**.

2. Tick the **Automatic brightness** box to make the phone adjust the screen brightness automatically, or clear the tick box to adjust the brightness manually.
3. Touch **OK**.

## Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When enabled, you need to touch and hold certain icon, draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch the **Home Key > Options > System settings > Security**.
2. Touch **Screen lock**.
3. Touch None, Press, Pattern, PIN or Password.
  - ▶ Touch **Press** to enable screen lock and allow unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding  on the display.
  - ▶ If you touch **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you're prompted to draw and redraw your own pattern.
  - ▶ If you touch **PIN** or **Password**, you're prompted to set a numeric PIN or a password you must enter to unlock your

screen.

**IMPORTANT:** If you forget the pattern you set, try five times and touch **Forget pattern?** to sign in to the Google Account you have added on the phone and reset the screen lock. You need an active Internet connection. You can also upgrade the phone software. See [Upgrading the Phone Software](#).

## Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google Accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or password each time you power on your phone.

**WARNING!** Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

1. Set a lock screen PIN or password.
2. Charge the battery.
3. Keep the phone connected to the charger.
4. Schedule an hour or more for the encryption process: you must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Touch the **Home Key > Options > System settings > Security > Encrypt phone**.

2. Read the information about encryption carefully.

The **Encrypt phone** button is dimmed if your battery's not charged or your phone's not plugged in.

If you change your mind about encrypting your phone, touch the **Back Key**.

**WARNING!** If you interrupt the encryption process, you will lose data.

3. Touch **Encrypt phone**.

4. Enter your lock screen PIN or password and touch **Next**.

5. Touch **Encrypt phone** again.

The encryption process starts and displays its progress.











 

 









Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is completed, you're prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone, to decrypt it.

# Knowing the Basics

The status bar at the top of the home screen provides phone and service status with various icons. Below are some of the icons you may see.

	Signal strength		No signal
	Mobile data in use		Flight mode
	New SMS / New MMS		Bluetooth on
	New Email		Connected to a Wi-Fi network
	New Gmail message		Portable Wi-Fi hotspot
	Battery flat		USB tethering is on
	Battery low		Vibrate mode
	Battery partially drained		Ringer off
	Battery full		Muted (microphone off)
	Battery charging		Speaker on
	Alarm set		Downloading data


## Open/Close the Notification Panel


Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch the **Back Key**.

## Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications.


- To respond to a notification, just touch it.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch  in the top right corner.
- Most apps that send notifications, such as Gmail and Google Talk, have notification settings that you can adjust.

**TIP:** In the notification panel, touch  to get to the **Quick Settings** menu quickly.



## Use Quick Settings


The Quick Settings in the notification panel make it convenient to view or change the most common settings for your phone.

Open the notification panel and touch 

- **Flight mode:** Touch to turn on or off the Flight mode.
- **Wi-Fi:** Touch to turn on or off Wi-Fi.
- **Bluetooth:** Touch to turn on or off Bluetooth.
- **GPS:** Touch to turn on or off GPS function.
- **Data connection:** Touch to turn on or off data connection.
- **Data usage:** Touch to enable or disable data access over the mobile network.
- **Audio profiles:** Touch to turn on or off **General** / **Silent** / **Meeting** / **Outdoor** mode.
- **Brightness:** Touch to adjust the screen brightness.
- **Timeout:** Touch to adjust the screen timeout.
- **Auto rotation:** Touch to turn on or off the Auto rotation.

## Managing Shortcuts and Widgets

### Add Shortcuts and Widgets


1. Touch the **Home Key** >  > **WIDGETS**.
2. Touch **Widgets** to view the available widgets and shortcuts.
3. Touch and hold a widget or shortcut and drag it to the Home

Screen.

## Move Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to the place you need.

## Remove Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to  to remove it.

## Adjust Widget Size

1. Touch and hold a widget on the Home Screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

**NOTE:** Not all widgets can be resized.

## Organizing With Folders

You can create folders on the Home Screen and add several shortcuts in a folder.

### Create a Folder

1. Touch and hold a shortcut on the Home Screen.
2. Drag the shortcut icon over another and release your finger. A new folder is created and both shortcuts are added.

3. If needed, drag more shortcuts and drop them into the folder.

## **Rename a Folder**

1. Touch a folder to open it.
2. Touch the folder name field and enter a new name.

## **Remove Shortcuts From a Folder**

1. Touch a folder to open it.
2. Touch and hold the shortcut you want to remove and then drag it to the Home Screen.
3. Release the shortcut and it will be removed from the folder.

## **Rearranging the Favourites Tray**

The Home Screen includes a customizable favourites tray at the bottom visible from all Home Screens. You can drag apps, shortcuts, folders, and other priority items in or out of the favourites tray for instant access from any Home Screen.



### **To remove items from the favourites tray:**

Touch and hold an item in the favourites tray and drag it out of the tray.

### **To add items to the favourites tray:**

Touch and hold an item on the Home Screen and drag it into the


favourites tray.

If the favourites tray is full, you need to remove an item in the tray.

## Entering Text

 
You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can touch the **Back Key** to hide the onscreen keyboard.








 
 

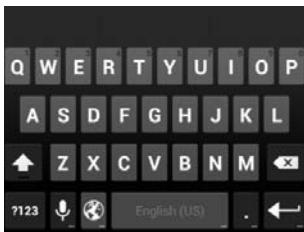
## Change Input Methods

1. When you use the onscreen keyboard to enter text, the icon  appears on the notification bar.
2. Open the notification panel and touch **Choose input method**.
3. Select an input method you need.

## Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, touch and hold  and the available accented letters and number 3 appear. Then slide to choose è.
- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more. Also, often used symbols are displayed above the keyboard.
- Touch  to use Google's networked voice input.
- Touch and hold  to change the input languages or set up



the Android keyboard.

## TouchPal Keyboard

TouchPal Keyboard offers three layouts: **Full QWERTY**, **12-Key PhonePad** and **CooTek T+**. You can swipe left or right on the TouchPal keyboard to switch the layout.





 










You can also use TouchPal Curve™ to speed up text input by replacing the key tapping operation with a tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

### To switch the keyboard layout:



1. Touch the **Home Key** > **Options** > **System settings** > **Language & input** >  (**TouchPal Keyboard**) > **Keyboard layout**.
2. Check **Swipe layout**.
3. In the TouchPal keyboard screen, touch  and clear the **Curve** box, and then touch **Close**.
4. Swipe left or right on the TouchPal keyboard to select the **Full QWERTY**, **12-Key PhonePad** or **CooTek T+** layout.

### Full QWERTY



- Touch the alphabetic keys to enter letters.
- Touch  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Slide right on  to enable word prediction. Slide left on  to disable word prediction.
- Touch  to change input language.
- Touch  to enter digits, symbols, emoticons and other pre-defined texts. Touch  to find more. Touch  to go back to enter letters.
- Touch  to start a new line.
- Touch or hold  to delete text before the cursor.
- Touch  to access the quick settings of TouchPal keyboard.
- Touch  to set the TouchPal keyboard.
- Touch  to open text editing options. You can select, cut,

copy, paste, and delete text, or move the cursor.

- Touch  to use voice input.
- Touch  to hide the onscreen keyboard. You can touch the text field again to show the keyboard.

## 12-Key PhonePad




Touch a key repeatedly until the desired letter or symbol appears.

If word prediction is enabled (  ), just touch the keys once and choose the right word.




## CooTek T+



Touch to enter the left letter on the key; Double-tap or flick right to enter the right letter/symbol on the key. If word prediction is enabled (  ), just touch the keys and choose the right word.

### To enable and use TouchPal Curve:

1. In the TouchPal keyboard screen, touch  and check **Curve**, and then touch **Close**.
2. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

**NOTE:** TouchPal Curve is only available in the **Full QWERTY** layout.



Tips for using TouchPal Curve:

- Touch when you want to. If you want to enter a single letter, go ahead and touch.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.




## Touch Input Settings

Choose the touch input settings by touching the **Options > System settings > Language & input** from the Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

## Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.

- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch  or **PASTE**.
- **Insert text from the clipboard:** Move cursor to the insertion point and then touch and hold the tab below the cursor. Release the finger and touch **PASTE**.

## Opening and Switching apps

### Open an App

1. Touch the **Home Key** > .
2. Slide left or right on the screen and touch an app to open it.

### Switch Between Recently Opened Apps

1. Touch and hold the **Options Key**.  
A list of the names and thumbnails of apps you've used recently opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Touch a thumbnail to open that app.

**NOTE:** You can swipe a thumbnail sideways to remove it from the list.

# Connecting to Networks and Devices

## Connecting to Mobile Networks

### Select Network Operator

1. Touch the **Home Key > Options > System settings > More > Mobile networks > Network operators**.
2. Touch **Select manually** to search for all available networks.
3. Touch a network in the network list to register manually.  
You can also touch **Choose automatically** to select preferred network automatically.

### Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch the **Home Key > Options > System settings > More > Mobile networks > Access Point Names**.
2. Touch the **Options > New APN**.
3. Touch each item to enter the information you get from your service provider.
4. Touch the **Options > Save** to complete.

**TIP:** To restore the default APN: **Options > Reset to default**.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

### Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch the **Home Key > Options > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **Connect**.

**NOTE:** Your phone automatically connects to previously used Wi-Fi networks when they are in range.

### Get Notified of Open Networks

Touch the **Home Key > Options > System settings > Wi-Fi**.

Slide the **Wi-Fi** switch to the **ON** position.

Touch the **Options > Advanced**.

Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

## Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch the **Home Key > Options > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch “+” **ADD NETWORK**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

## Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Touch the **Home Key > Options > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the Wi-Fi network name and then touch **Forget network**.

## Adjust Advanced Wi-Fi Settings

1. Touch the **Home Key > Options > System settings > Wi-Fi**.
2. Touch the **Options > Advanced** to adjust the following

settings.

- ▶ **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
- ▶ **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi on in sleep mode.
- ▶ **Wi-Fi optimization:** Set whether Minimize battery usage when Wi-Fi is on.
- ▶ **MAC address:** Check the MAC address.
- ▶ **IPv4 address:** Check the phone's IP address.

## Using Wi-Fi Direct

Wi-Fi Direct allows Wi-Fi devices to connect to each other without the need for wireless access points (hotspots).

**NOTE:** Activating this feature will disconnect your current Wi-Fi network connection.

### Connect to Another Device via Wi-Fi Direct

1. Touch the **Home Key > Options > System settings > Switch Wi-Fi on, then touch Wi-fi**
2. Press **Options > Wi-Fi Direct**
3. Your phone will search for other devices enabled with Wi-Fi direct connections.
4. Touch a device name to begin the connection process.

**NOTE:** The target device must also have Wi-Fi Direct service activated and running before it can be detected by your

phone.

5. Touch **Connect**.

The other device will receive a Wi-Fi Direct connection prompt and need to accept the request for connection.

6. Once connected the device is displayed as “Connected” in the Wi-Fi Direct devices list.

## Send Data via Wi-Fi

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Wi-Fi. The method may vary by application and data type.
3. Touch a device the phone has connected with or wait for it to search for new devices and touch one of them.

## Receive Data via Wi-Fi

When an attempt to transfer data via Wi-Fi is received, you can see a notification in the status bar. Touch **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder (*WLANShare*, for instance). You can access them with the **File Manager** app.

## Connecting to Bluetooth Devices

Bluetooth® is a short-range wireless communication technology.



Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

## Turn Bluetooth On/Off

1. Touch the **Home Key > Options > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When Bluetooth is on, the  icon will appear in the status bar.

## Change the Device Name

1. Touch the **Home Key > Options > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.
3. Touch the **Options > Rename phone**.
4. Edit the name and touch **Rename**.

## Pair With Another Bluetooth Device

1. Touch the **Home Key > Options > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch

**SEARCH FOR DEVICES** if you want to scan again.

3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **Pair**. Alternately, enter a Bluetooth passkey and touch **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

**NOTE:** The Bluetooth passkey may be fixed for certain devices, such as headsets and handsfree car kit. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.


## Send Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Bluetooth. The method may vary by application and data type.
3. Touch a Bluetooth device the phone has paired with or wait for it to search for new devices and touch one of them.

## Receive Data via Bluetooth

1. Turn Bluetooth on before trying to receive data via Bluetooth.

**NOTE:** If the phone has not been paired with the sending device, you may need to touch **Bluetooth** > [your phone's name] in **Settings** to keep the phone detectable through Bluetooth.

2. Flick down the status bar and touch .
3. Touch **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder (*Bluetooth*, for instance). You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.

## Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSD card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

### Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Touch the **Turn on USB storage**, or open the Notification panel and touch **Connected as USB storage**.
3. Choose one of the following options:
  - ▶ **USB storage:** XP recommended. Lets you transfer files between your computer and your Android device.
  - ▶ **Media device (MTP):** Lets you transfer media files on Windows, or using Android File Transfer on Mac. (see [www.android.com/filetransfer](http://www.android.com/filetransfer))
  - ▶ **Camera (PTP):** Lets you transfer photos using camera

software, and transfer any files on the computers that don't support MTP.

- ▶ **Charge only:** Stop all USB functions. Lets you speed up USB charging and decrease power consumption.
- ▶ **Built-in CD-ROM:** Show a virtual CD-ROM containing computer driver installation software.

## Connect With Windows Media Player

You can sync music on your phone and the computer installed with Windows Media Player.


1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

## Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Remove the microSD Card From Your Phone

If you need to remove the microSD card while the phone is on, you should unmount it first.

1. Touch the **Home Key > Options > System settings > Storage**.
2. Scroll down and touch **Unmount SD card > OK**.
3. The  icon appears in the status bar and you can now safely remove the microSD card from the phone.

## Erase microSD Card

1. Touch the **Home Key > Options > System settings > Storage**.
2. Scroll down the screen and touch **Erase SD card > Erase SD card > Erase everything**.

**CAUTION!** The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved.

## Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

### Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** While using USB tethering you cannot access file storage on the handset or SD card.

1. Connect your phone to your computer with a USB cable.
2. Touch the **Home Key > Options > System settings > More > Tethering & portable hotspot**.
3. Check **USB tethering**. A new network connection will be created on your computer.

**NOTE:** To stop sharing your data connection, uncheck **USB tethering** or disconnect the USB cable.

## Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth, you can configure your phone to share its mobile data connection with your computer.

1. Pair your phone with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch the **Home Key > Options > System settings > More > Tethering & portable hotspot**.
4. Check **Bluetooth tethering**. Your computer is now sharing your phone's data connection.
5. To stop sharing your data connection, uncheck **Bluetooth tethering**.

## Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's applications to access the Internet via its Wi-Fi connection. You still remain connected to the Internet via your mobile data network.

1. Touch the **Home Key > Options > System settings > More > Tethering & portable hotspot**.
2. Slide the **Wi-Fi hotspot** switch to the **ON** position.  
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.

**NOTE:** To stop sharing your data connection, uncheck **Portable Wi-Fi hotspot**.

## Rename or Secure Your Wi-Fi Hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure your portable Wi-Fi hotspot.

1. Touch the **Home Key > Options > System settings > More > Tethering & portable hotspot > Wi-Fi hotspot > Set up Wi-Fi hotspot**.
2. Set your name and security options as follows:
  - ▶ **Network SSID:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - ▶ **Security:** Choose a security option: **Open** (not recommended), **WPA PSK** or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA PSK** or **WPA2 PSK**, touch the Password field to edit the security password.
3. Touch **Save** to save your settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

### Add a VPN

1. Touch the **Home Key > Options > System settings > More > VPN**.
2. Touch “+”, and fill in the information provided by your network administrator.
3. Touch **Save**.

The VPN is added to the list on the VPN screen.

### Connect to a VPN

1. Touch the **Home Key > Options > System settings > More > VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **Connect**.

When you are connected, the VPN connected icon appears in



the Status bar.

## Modify a VPN

1. Touch the **Home Key > Options > System settings > More > VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit network** and edit the VPN settings you want.
4. Touch **Save**.

## Delete a VPN




1. Touch the **Home Key > Options > System settings > More > VPN**.
2. Touch and hold the VPN that you want to delete.
3. Touch **Delete network**.

# Phone Calls

You can make calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

## Placing and Ending Calls

### Place a Call by Dialling

1. Touch the **Home Key** > .
2. In the dialler tab , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.

**NOTE:** As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.

3. Touch the Phone icon  below the keypad to dial.

**TIP:** To make an international call, touch and hold the 0 key to enter the plus (+) symbol for international dialling. Next, enter the country code, followed by the city/area code and phone number.



## End a Call

During a call, touch  on the screen.

## Answering or Rejecting Calls



When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.



## Answer a Call

When you receive a phone call, drag  over  to answer the call.

**NOTE:** To silence the ringer before answering the call, press the **Volume Keys** up or down.

## Reject a Call


When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.


**TIP:** To edit the text response from within the Phone app, touch the **Options > Settings > Other Settings > Quick responses**.

## Working with Call Logs


The Call Log shows all calls made, received or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call log, you can touch the Phone app > 



## Place a Call From the Call Log

1. Open the call log, touch a number for more information about the call, or touch  to call that number.

## Add a Call Log Number as a Contact

1. Open the call log.
2. Touch a number to view more call information.
3. Touch .
4. Touch Create New Contact or select a contact in the list to add the number to an existing contact
5. Touch **DONE** when finished.

## Take Other Actions on a Call Log Entry

1. Open the call log.
2. Touch a number to view more call information. While viewing the call details, you can:
  - ▶ Touch the number to call it.
  - ▶ Touch the **Options > Edit number before call** to edit the number in the dialler before calling it.
  - ▶ Touch  to send a message.
  - ▶ If the number belongs to a contact you have, touch  to view contact details.



## Delete the Call Log


1. Open the call log.
2. Touch the **Options > Delete**.
3. Touch the call log items you want to delete and then touch **OK** to delete the call logs.

**NOTE:** You can also touch a number in the call log screen, and touch the **Options > Remove from call log** to delete the call log of the number.

## Calling Your Contacts



### Call a Contact

1. Touch the **Home Key** >  and then touch the Contact tab .
2. Flick the screen up or down to view all your contacts with phone numbers.

**TIP:** Touch  to search your phonebook



3. Touch a contact or number to call it.

## Call a Favourite Contact

1. Touch the **Home Key** >  and then touch **Contacts** .
2. Your favourite contacts and frequently called contacts or numbers are listed at the top of the screen.
3. Touch a contact or number to call it.

## Checking Voicemail

With voicemail enabled callers can leave messages when they cannot reach you.




 


1. Touch the **Home Key** > .
2. Touch and hold  in the dialler. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

**NOTE:** To set your voicemail service, touch the **Options** >


**Settings** in the dialler and touch the voicemail settings you want to change. For detailed information, please contact the service provider.

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to turn on or off the speaker.
- Touch  to mute or unmute your microphone.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the dialler, for example to enter numbers
- Touch  to switch between current calls.
- Touch  to merge the separate calls into a single conference call.



- Touch  to end the current call.

**WARNING!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

## Managing Multi-party Calls



When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

**NOTE:** The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.


### Switch Between Current Calls

When you're on a call, your phone screen informs you that another call is coming in and displays the caller ID.

#### Respond to an incoming call while you're on a call:




Drag  over  to answer the call. (This puts the first caller on hold and answers the second call.)

## To switch between two calls:


Touch  on the screen.

## Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialler screen, enter a number and touch .
2. Once you have established the connection, touch  and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, touch .


If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

## Adjusting Your Call Settings

### Use Fixed Dialling Numbers

Fixed Dialling Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.


1. Touch the **Home Key** >  > **Options** > **Settings** > **Other Settings** > **Fixed Dialling Numbers**.
2. The following options are available:
  - ▶ **Enable FDN:** Input the PIN2 code to enable the FDN feature.
  - ▶ **Change PIN2:** Change the PIN2 code for FDN access.
  - ▶ **FDN list:** Manage the FDN list.

**NOTE:** The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can get your SIM card locked. Contact the service provider for assistance.

## Edit Quick Response to Rejected Callers

1. Touch the **Home Key** >  > **Options** > **Settings** > **Other Settings** > **Quick responses**.
2. Touch the text message to edit it.

## Set Voicemail

1. Touch the **Home Key** >  > **Options** > **Settings** > **Voice**

## **Call > Voicemail.**


2. Touch **Service** to select voicemail service provider. Your carrier is the default.
3. Touch **Set up** to edit the voicemail number if necessary.

## **Set Speed Dials**

You can touch and hold the 1 ~ 9 key from the dialler to call the corresponding speed dial number.


The number key 1 is reserved to speed dial your voicemail.

### **To assign a speed dial key:**

1. Touch the **Home Key** >  > **Options** > **Speed dial**.
2. Touch a speed dial key.
3. Enter a phone number or select one from the contact list.


## **Bar Certain Calls**

Call barring feature allows you to forbid certain types of calls from your phone.


1. Touch the **Home Key** >  > **Options** > **Settings** > **Voice Call** > **Call Barring**.
2. Set the restriction of specific types of calls from your phone.

## Forward Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Touch the **Home Key** >  > **Options** > **Settings** > **Voice Call** > **Call forwarding**.
2. Touch an available option ( **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**) to enable it.

 


## Other Options

1. Touch the **Home Key** >  > **Options** > **Settings** > **Voice Call** > **Additional settings**.
2. Touch **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.



**NOTE:** Please contact the service provider to check whether the caller ID and call waiting features are available.

# People

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.




To see your contacts, touch the **Home Key** > . From there, you can touch the tabs on the top of the screen to quickly switch to the contact groups  or favourite contacts .

## Checking Contact Details

1. Touch the **Home Key** >  and touch the all contacts tab  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.

**TIP:** If you have a lot of contacts stored, you'll see a slider when you touch the right side of the screen. To go directly to a letter, touch and hold the slider and drag it to a letter.

## Adding a New Contact



1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch  to add a new contact.
3. Touch the account field near the top of the screen to choose where to save the contact. If a sync account is selected, the

contacts will be synced automatically with your account online.

4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **DONE** to save the contact.

## Setting Up Your Own Profile

You can create your own name card in your phone.

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch **Set up my profile** or your name, whichever is at the top of the contact list.
3. Edit your profile information and touch **DONE**.

## Importing, Exporting, and Sharing Contacts


You can import/export contacts from/to your SIM or microSD card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using Bluetooth, Email or Messages, etc.

### Import Contacts From the SIM Card


1. Touch the **Home Key** > .

2. Touch the **Options > Import/export > SIM card > Next > Phone > Next**.
3. Touch to select the contacts you need and then touch **OK**.


## **Import Contacts From the microSD Card**

1. Touch the **Home Key** > .
2. Touch the **Options > Import/export > SD card > Next > Phone > Next**.
3. Select the Vcard file (VCF) to import and confirm.



## **Export Contacts to the SIM Card**

1. Touch the **Home Key** > .
2. Touch the **Options > Import/export > Phone > Next > SIM card > Next**.
3. Touch to select the contacts you need and then touch **OK**.

## **Export Contacts to the microSD Card**

1. Touch the **Home Key** > .
2. Touch the **Options > Import/export > Phone > Next > SD card > Next**.
3. Touch to select the contacts you need and then touch **OK**.


## **Share Contacts**

1. Touch the **Home Key** >  and touch the all contacts tab .






2. Touch the **Options > Share visible contacts**.
3. Touch to select the contacts you need and then touch **OK**.
4. Choose to share the contacts via **Bluetooth, Email, Gmail , MMS, SD Card** or **SMS**.

## Working With Favourite Contacts




In the favourite contacts  tab, you can find your favourite contacts and frequently contacted contacts.

### Add a Contact to Favourites

You can add the contacts used frequently to Favourites, so you can find them quickly.



1. Touch the **Home Key >**  and touch the all contacts tab .
2. Touch a contact and then touch  next to the contact name.

### Remove a Contact From Favourites




1. Touch the **Home Key >**  and touch the favourite contacts tab .
2. Touch a favourite contact and then touch  next to the contact name.

# Working With Groups



## View Your Contact Groups

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Scroll through the list to view the preset groups and any groups you have created.
3. Touch a group to view its members.



## Set Up a New Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch  to create a new group.
3. Touch the account field on the top of the screen to choose an account for the group.
4. Enter the group name and touch **DONE**.



## Delete a Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Options > Delete**.
3. Touch **OK** to disband the group. The contacts in the group will not be deleted.

## Edit a Group


1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Options** > **Edit**.
3. Edit the group name, add the members or remove them.

## Searching for a Contact

1. Touch the **Home Key** > .
2. Touch  at the bottom of the screen.
3. Input the contact name you want to search for. The contacts matched will be listed.


## Editing Contacts

### Edit Contact Details


1. Touch the **Home Key** > .
2. Touch a contact you need to edit and then touch the **Options** > **Edit**.
3. Edit the contact and touch **DONE**.

### Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Touch the **Home Key** > .
2. Touch a contact you want to set a ringtone for and then touch the **Options > Set ringtone**.  
**NOTE:** The contact must be saved on the phone, not the SIM card.
3. Select a ringtone you like and touch **OK**.

## Delete a Contact

1. Touch the **Home Key** > .
2. Touch a contact you want to delete and touch the **Options > Delete**.
3. Touch **OK** to confirm.

### To delete several contacts, you can:

1. Touch the **Options > Delete contact** in the all contacts screen.
2. Touch to select the contacts you want to remove and then touch **OK**.
3. Touch **OK** to confirm.

# Accounts

## Adding or Removing Accounts

You can add multiple Google Accounts and Microsoft Exchange ActiveSync accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

### Add an Account

From the Home Screen, touch the **Options > System settings**.

Touch **Add account**.

Touch the type of account you want to add.

Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **Accounts** list.

### Remove an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.


From the Home Screen, touch the **Options > System settings**.

Touch **Account settings** and Touch the account.

Touch **Remove account** > **OK**.

## Configuring Account Sync


### Configure Auto Sync Setting

1. Open the **Accounts & sync** settings screen.  
Your accounts and sync status are displayed. The  icon turns green if automatic sync is enabled for some or all of the account's data, and gray if automatic sync is disabled.
2. Touch the **ON/OFF** switch to turn on or off automatic sync.
  - ▶ When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
  - ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

### Sync Manually

1. Open the **Accounts** settings screen.
2. Touch the account whose data you want to sync.
3. Touch the **Options** > **Sync now**.

# Email

Touch  in the Home Screen and select **Email**. Use it to read and send emails from services other than Gmail.


## Set Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Touch **Next** to let the phone retrieve the network parameters automatically.  
**NOTE:** You can also enter these details manually by touching **Manual setup** or when automatic setup fails.
3. Follow the on-screen instructions to finish the setup.

Your phone will show the inbox of the email account and start to download email messages.

## Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.


You can also check new emails manually by touching  in any of the email account's boxes. Touch **Load more messages** at the bottom of the email list to download earlier messages.


## Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

### Reply to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.
2. Do the following as you need:

To...	do...
Reply to the sender,	touch  in the message header.
Reply to the sender and all recipients of the original message,	touch in the message header <b>Options &gt; Reply all</b> .
Forward the message,	touch in the message header <b>Options &gt; Forward</b> .


3. Edit your message and touch .

### Mark an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.



- While reading a message, touch the **Options > Mark as unread**.




- While in a message list (for instance, the inbox), touch the checkboxes before the messages and then touch .

## Delete an Email


You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch  > **OK**.
- While in a message list (for instance, the inbox), touch the checkboxes in front of the messages and then touch  > **OK**.

## Writing and Sending an Email

1. Open your email Inbox and touch .

**NOTE:** If you have more than one email account added on the phone, touch the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
3. Enter the email subject and compose the email text.
4. Touch the **Options > Attach file** to add Photo, Music, video and other types of files as attachments.
5. Touch  at the top right of the screen to send the message.

## Adding Signature to Your Emails

You can set a few lines of plain text as signature for every outgoing email message from an account, such as your name and contact information.

1. Open the **Email** app.
2. Touch the **Options > System settings** and select the account you want to add signature to.
3. Touch **Signature** and enter the text.
4. Touch **OK**.

## Adding and Editing Email Accounts

### Add an Email Account

After setting up your first email account (see [Email – Set Up the First Email Account](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch the **Options > Settings** and touch **ADD ACCOUNT** at the top right of the screen.
3. Set up the account as you would with the first one.

### Edit an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails,

and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the Inbox screen.
2. Touch the **Options > Settings** and touch the account whose settings you want to change.
3. Make the changes you want and touch the **Back Key** when you're finished.

## Remove an Email Account

1. Open **Email** to get the Inbox screen.
2. Touch the **Options > Settings** and touch the account you want to remove.
3. Touch Remove account > OK.

## Changing General Email Settings

General settings apply to all email accounts you add.


1. Open **Email** to get the Inbox screen.
2. Touch the **Options > Settings > General**.
3. Make the changes you want and touch the **Back Key** when you're finished.

# Gmail


After you sign in to your Google account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.

**NOTE:** This feature may not be available in certain regions or with certain service providers.

## Opening Your Gmail Inbox

Touch  in the Home Screen and select **Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Touch  at the bottom right of the screen to refresh your Inbox and download new messages.



## Switching Accounts

Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your phone, you can switch accounts and view information in each account.

1. From your Inbox, touch the current account at the top of the screen.

From the drop-down menu, touch the account you want to see. The account's Inbox will open.

## Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Touch .
3. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach an image, touch the **Options > Attach picture** or **video** and select a file from the gallery.
6. Touch  at the top right of the screen to send the message.

TIP: You can share other types of media from File Manager.

## Adding Signature to Your Gmail Messages


You can set a few lines of plain text as signature for every outgoing Gmail message. The signature you set on the phone is independent of the signature you use for Gmail on the web.


1. Open the **Gmail** app.
2. Touch the **Options > Settings** and select the account you want to add signature to.
3. Touch **Signature** and enter the text.
4. Touch **OK**.

## Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.

Do the following as you need:

To...	do...
Reply to the sender,	touch  in the message header.
Reply to the sender and all recipients of the original message,	touch in the message header <b>Options &gt; Reply all</b> .
Forward the message,	touch in the message header <b>Options &gt; Forward</b> .

Edit your message and touch the send icon .

## Working With Received Attachments

When a message has an attachment, Gmail displays information about that attachment at the top of the message.

Depending on the attachment type, the applications installed on your phone as well as your settings, you may preview, view, play, save the attachment, or check information about the attachment.


**TIP:** For documents with multiple pages, touching the **Preview** option will only download the pages you view, while touching

**View**, **Play**, or **Save** will download the entire file and cost more time and data.

## Searching for Messages

You can search for messages using words that appear in addresses, subjects, labels, or contents.

**NOTE:** If you search while the phone doesn't have an active Internet connection, only messages synchronized onto your phone can be searched.

1. Open the **Gmail** app and touch  or the **Search Key**.
2. Enter the words to search for and touch the search key on the screen keyboard.


As you type, suggestions may appear below the search field. You can touch a suggestion to search for it right away, or touch the arrow next to it to add its text to the search field.

3. In the search results, touch the message you need and work with it just as you would with any Gmail message.


## Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labelling them or adding stars to them. Labels also help you sort your messages, just like folders.


**To label or change labels:**

1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to label.
2. Touch the label icon  at the bottom of the screen.
3. Check or uncheck labels in the new screen and touch **OK**.

#### **To add stars to messages:**

1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to star.
2. At the bottom of the screen, touch  > **Add star**.

#### **To view messages by label:**

1. Open the **Gmail** app and touch the label icon  at the bottom of the message list without checking any message.
2. Touch the label to view messages with that label.

**TIP:** You can also touch the name of your account at the top of the screen. Then touch one of the labels listed in the **RECENT** section, below account names.

## **Changing Gmail Settings**

Touch the **Options > Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.





# Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).



## Opening the Messaging Screen

Touch  in the Home Screen and select **Messaging**.

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.




## Sending a Text Message

1. On the **Messages** screen, touch  at the bottom.
2. Add recipients by one of the following ways.
  - ▶ Touch the **Type name or number** field and manually enter the recipient's number the contact name. If the phone presents a few suggestions, touch the one you want to add.
  - ▶ Select recipients from your contacts by touching .
3. Touch the **Type text message** field and enter the content of

your text message.

4. Touch .

## Sending a Multimedia Message



1. On the **Messages** screen, touch  at the bottom.
2. Enter the recipient and the text of the message, as you do when sending a text message. You can also include email addresses as recipients.
3. Touch the **Options > Add subject** to add a message subject.
4. Touch the paper clip icon  to attach a file to the message.
5. Touch .

**NOTE:** When you enter an email address as a recipient, add a subject, or attach a file, the message is automatically converted to a multimedia message. When you delete such information, the message is converted to a text message.


## Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messages** screen, touch the thread that has the message you want to reply to.

2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch .

## Forwarding a Message

1. On the **Messages** screen, touch the thread that has the message you want to forward.
2. Touch and hold the message.
3. Touch **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Touch .

## Copying a Message

You can copy text messages in the phone storage to the SIM card, or vice versa.

- To copy a text message from the phone to the SIM card, touch and hold the message and select **Save message to SIM card**.
- To copy a text message from the SIM card to the phone, touch the **Options** in the Messaging screen and select **Settings > Text Message(SMS) > Manage SIM card messages**.


- Then touch and hold a message and select **Copy to phone memory**.

## Viewing Details About a Message


1. Touch and hold a message in a thread.
2. Touch **View details** to see information about the message, such as message type, sender, recipient, or date.

## Deleting Messages or Threads

### To delete messages in a thread:

1. On the **Messages** screen, touch a thread.
2. Touch the **Options > Select message**.
3. Touch the messages you want to delete. The ones you touch will have a check in the box in front of them.
4. Touch  at the bottom.
5. Touch **Delete**.

### To delete message threads:

1. On the **Messages** screen, touch and hold one thread you want to delete.
2. If there are more threads you want to delete, touch them one by one.
3. Touch  at the bottom.
4. Touch **Delete**.

## Changing Message Settings

Touch the **Options > Settings** in the Messages screen to change Messages settings.

# Calendar

Calendar on the phone works with the web-based Google Calendar service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch  in the Home Screen and select **Calendar**.

## Viewing Your Calendars and Events

### Select Visible Calendars

1. Open the **Calendar** app.
2. Touch the **Options > Calendars to display**.
3. In the new screen, touch the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.


### Change Calendar Views

You can view your calendars in different forms. The app offers four views: Day, Week, Month, and Agenda.

To change calendar views, touch the time period shown at the

top left and select the view you prefer.

You can also change to Day view from Month view by touching any day in the grid.

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, touch  at the top to quickly switch to today.

## View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

## Creating an Event

1. In any Calendar view, touch the **Options > New event** to open an event details screen for a new event.

You can also touch a spot in Day or Week view twice to add an event to that time spot.

2. Add details about the event.



Enter a name, location, time span, and other additional details about the event.

**NOTE:** If you have more than one calendar, you can choose the calendar to which to add the event by touching the current calendar above the **Event name** box.

3. Touch **DONE** at the top of the screen to save the new event.

## Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see [Viewing Your Calendars and Events – View Event Details](#) in this chapter).
3. Do one of the following as you need.

To...	do...
Edit the event,	touch  at the top of the screen. Touch <b>DONE</b> to save your changes.
Delete the event,	touch  at the top of the screen and then touch <b>OK</b> .

## Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda). Then touch the **Options > Settings**.

You can change **General settings**, which apply to all accounts, or other settings that only apply to specific accounts.




# Google Talk

Google Talk is Google's instant messaging service. You can use it to communicate in real time with other people who also use Google Talk, on a phone, on the web, or with a desktop application.


## Signing into See Your Friends

You must sign in to your Google account before you can use Google Talk.

Touch  in the Home Screen and select **Talk**. The first time you launch **Talk**, touch the account you want to sign in with. Your friends list is then displayed.

**NOTE:** You remain signed in to Google Talk after launching the **Talk** app even if you switch to other apps, until you explicitly sign out. To sign out, go back to your friends list and touch the **Options > Sign out**.

## Adding a Friend

1. In the friends list, touch  at the top right of the screen.
2. Enter your friend's address and touch **DONE**.

Your friend's address in Google Talk is a Gmail or other email address that is configured to connect to Google Talk.




**NOTE:** If other people try to add you as a friend, you will receive a notification in the status bar and the invitation appears

in your friends list. You can touch the invitation to **Accept**, **Decline**, or **Block**.

## Changing Your Online Status

1. Touch your own entry at the top of your friends list.
2. In the screen that opens, touch your current status to change it (or to sign out of **Talk**).
3. Enter a status message or if you already have one, edit it.  
In addition to the standard status settings, you can also touch **Change to a recently-used status** to select a message that you've entered previously.
4. Touch the **Back Key** to return to your friends list.

## Chatting With Friends

1. Touch a friend in your friends list. The chat screen for that friend opens.
2. Type in a message and touch . You can also touch  or  to initiate a video chat or voice chat if the friend is online.

## Switch Between Active Chats

If you have more than one chat going, you can switch between these chats in one of the following ways.

- Touch the **Back Key** to return from one chat to the friends

list. Then touch the other friend you want to chat with.

- While you are in one chat screen with a friend, swipe left or right to switch to the chat screen with the other friend.

## Use Group Chat

When you're chatting, you can invite additional friends to join a group chat.

1. On a chat screen, touch the **Options > Add to chat**.
2. Touch the name of the friend to invite.

The friend you invited and the current participants receive an invitation to a group chat. Each one who accepts the invitation joins the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your friends list, with a group chat icon.

## End the Chat

While on a chat screen, touch the **Options > End chat**.


You can also touch the **Options > End all chats** while in the friends list to end all active chats.

## Changing Google Talk Settings


On any chat screen or the friends list, touch the **Options > System settings** to change Google Talk settings for your account.

# Google+



Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Touch  in the Home Screen and select **Google+**. The first time you open the Google+ app, select the instant upload and contact sync options.

## Organizing Your Contacts

1. Open the **Google+** app.
2. Touch  > **Circles**.
3. Enter the person you want to search for or select a suggested person, and touch **Add**.
4. Check the circles you want the person to be added to, or touch **Create a new circle**.







## Getting Updates


1. Open the **Google+** app.
2. Touch  > **Home**.
3. Swipe up or down to see different information shared with you by other users. Touch  to choose what groups of information are shown.

- ▶ **Nearby** shows posts shared with you by users near your current location.
- ▶ **All circles, Acquaintances, Family, Following, and Friends** show updates from people you've added to your circles.
- ▶ **What's hot** shows popular posts on Google+.

## Chatting With Contacts

You can chat with your Google+ contacts through instant messaging, similar to sending a text with the Messages app.


1. Touch  > **Messenger** in the **Google+** app or touch from the Home Screen  > **Messenger**.
2. Touch  to create a new message.
3. If you touched  at the top, touch  to add recipients. They can be contacts or circles.
4. Enter the message.
5. Touch  to send the message.

**TIP:** Touch  > **Hangouts** to hold a video chat with your friends.



## Checking Photos

You can see your own photo albums and those shared by other

users.

Touch  > **My photos** in the **Google+** app to see all available albums.


## Checking and Managing Your Profile

1. Touch  > **Profile** in the **Google+** app.
2. Swipe up or down to see your posts and personal info.  
Touch  and you can change your profile photo.

# Browser


Use **Browser** to view web pages and search for information.

## Opening the Browser

Touch  in the Home Screen and select **Browser** to start this function. The last web page you were viewing is displayed. If you have not used **Browser** recently, your home page opens.

Browser also opens when you touch a web link - for example, in an email or a text message.

## Open a Web Page or Search the Web

1. Open the **Browser** app.
2. Touch the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for. You can also touch  to search by voice.
4. Touch a URL or search suggestion or touch **Go** on the keyboard to open the web page or search results.

**TIP:** Touch the **X** to the left of the address box if you want to stop opening the page.

## Set the Homepage

Your home page opens when you open a new browser tab, and

when you start **Browser** after restarting your phone or after not using the app for a while.

1. Open the page you want to set as your home page.
2. Touch the **Options > Settings > General > Set homepage**.
3. Touch **Current page** or one of the following options.
  - ▶ **Blank page:** Open browser tab without opening a web page by default. This can make new Browser tabs open more quickly.
  - ▶ **Default page:** Set the factory default URL as the homepage.
  - ▶ **Most visited sites:** Every new browser tab displays a list of your frequently visited sites for you to choose from.
  - ▶ **Other:** Type a URL as the homepage.

## Get Information About the Current Page

Touch the page icon, to the left of the address box.

## Working With an Opened Page

While viewing most web pages, you can do the following operation.

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Touch the screen with two fingers and pinch them together.
- **Zoom in:** Touch the screen with two fingers and spread them



apart.

- Go back: Touch the **Back Key** to return to the page you've viewed previously in the same window.
- Refresh the page: Touch the **Options > Refresh**.
- Find text on the page: Touch the **Options > Find on page** and type the terms you want to search for.
- Send the page URL to friends: Touch the **Options > Share page** and select how you want to send the URL.
- Follow a link: Touch a link on the web page to open it.
- Save the page for offline reading: Touch the **Options > Save for offline reading**. You can touch the **Options > Bookmarks/History > SAVED PAGES** to read them.


#### TIPS:

- Some web sites may redirect you to the mobile version of their web pages, which mostly do not support scrolling or zooming. If you want to view the desktop version, touch the **Options** and check **Request desktop site**.
- Besides links, **Browser** also recognizes some phone numbers, addresses, and similar information for you to act on. Try touching them and see what happens.


## Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

### To open a new browser tab:

1. Touch the tabs icon  to the right of the address box.
2. Touch **+** at the top right of the screen. A new browser window opens and the homepage is loaded.


### To switch between tabs:

1. Touch the tabs icon  to the right of the address box.
2. Swipe vertically to scroll through the list of opened tabs.
3. Touch the thumbnail of the tab you want to open.

**TIP:** Swipe a thumbnail horizontally or touch its **X** to close the tab.


### To use incognito tab for privacy browsing:

Pages you view in incognito tabs won't appear in your browsing history or search history. No trace will be left on your phone once you close the tab.

1. Touch the tabs icon  to the right of the address box.
2. Touch the Options > New incognito tab.

## Downloading Files

Touch and hold an image or a link to a file or webpage. In the menu that opens, touch **Save image** or **Save link**.

The downloaded files are saved to the phone or memory card. View or open them in the **Downloads** app ( > **Downloads**).

## Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, touch the **Options > Bookmarks/History** in a browser tab and then touch the bookmark.

### Bookmark a Web Page

1. Open the web page.
2. Touch the **Options > Save to bookmarks**.
3. Edit the bookmark label and address if necessary, or choose a different account.

Touch the name beside **Add to** to change the place where the bookmark will be stored.

4. Touch **OK**.

### Edit a Bookmark

1. Touch the **Options > Bookmarks/History**.
2. Touch and hold the bookmark to edit.
3. Touch **Edit bookmark**.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Touch **OK**.

**NOTE:** Preinstalled bookmarks may not be edited.

## Delete a Bookmark

1. Touch the **Options > Bookmarks**.
2. Touch and hold the bookmark to delete.
3. Touch **Delete bookmark**.
4. Touch **OK**.

**NOTE:** Preinstalled bookmarks may not be deleted.

## Viewing Your Browsing History

1. Open the Browser app and touch the **Options > Bookmarks/History**.
2. Touch the **HISTORY** tab.
3. Touch a time span to view the web pages you browsed during then. You can touch an item to reopen the web page.

## Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, touch the **Options > Settings**.

# Maps, Navigation, and Local

## Activating Location Services



To use **Navigation**, **Local**, and find your location on Google Maps, you must have location services turned on on your phone.

1. Touch the **Home Key > Options > System settings > Location access**.

2. Select the location options you want to use.


Check **Wi-Fi & mobile network location** to use Google's location service to estimate your location faster. Check **GPS satellites** to turn on/off use GPS satellites to determine your location.


## Getting Your Location


1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the top right.

The map centres on a blue blinking dot that indicates your location.

## Searching for a Location

1. Touch  in the Home Screen and select **Maps**.



2. Touch .
3. Enter the place you're looking for in the search box at the top. You can enter an address, a city, or a type of business or establishment, for example, "museums in Shanghai." As you enter information, suggestions from your previous searches and from popular searches appear in a list below the search box. You can touch a suggestion to search for it.

**TIP:** You can also touch  beside the search box to use voice search.

4. Touch the search icon on the keyboard. Balloons with letter labels indicating search results appear on the map.
5. Touch a balloon to open a label with summary information about the location.
6. Touch the label to open a screen with more information, as well as options for obtaining directions and more.


## Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the bottom.
3. Enter a start and end point and select the mode of transportation (car, public transit, or walking). If you have enabled My Location, this will appear in the start point field by


default.


4. Touch **GET DIRECTIONS**. The directions to your destination are marked on the map. Touch the left or right arrow to see the direction step by step. You can also touch **DIRECTIONS LIST** to see your route displayed in a list.

**NOTE:** Touch  > **Navigation** from the Home Screen to use Google Maps Navigation (beta) and get turn-by-turn voice directions.

## Searching for Local Places

Google Places helps you find all kinds of businesses and establishments around you. You can rate these places and get recommendations

1. Touch  in the Home Screen and select **Local**. Or from the **Maps** app, touch the Maps icon at the top of the screen and select **Local**.
2. Wait while you are being located. Your location, when found, is shown at the top.
3. Select a place category and the information for that type of place near you will be displayed.

You can also use the  button at the top to find the place you need.

**NOTE:** Touch the **Options > Add a search** to add new


place categories.

4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on **Maps**, find out how to get there, give that place a call, add your rating and review, and more.


## Sharing Location using Maps

Google Latitude lets you and your friends view each others' locations on maps and share status messages with each other.


To join **Latitude** on your phone, open the **Maps** app, touch the Maps icon at the top of the screen and select **Join Latitude > Share location with family or friends > Agree & Continue**.

After you join in, you can always touch the Maps icon at the top in **Maps** and select **Latitude** or touch  **> Latitude** from the Home Screen to see your status as well as that of your selected friends.

In **Latitude**, you can do the following operations.

- Touch  to refresh friends' status.
- Touch **MAP VIEW** to see friends on **Maps**. You can touch the left/right arrow to switch between each friends and yourself.



- Touch  to add new friends to Latitude from contacts, via email addresses, or from suggested friends.
- Touch the **Options** to show or hide stale friends, who haven't updated their location with you for a while.
- Touch the **Options > Location Settings** to change Latitude settings or sign out of Latitude service.

# Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card or to the phone's internal storage. You can copy them to your computer or access them in the **Gallery** app.

## Capturing a Photo


1. Touch  in the Home Screen and select **Camera**.

Aim the camera at the subject and make any necessary adjustment.




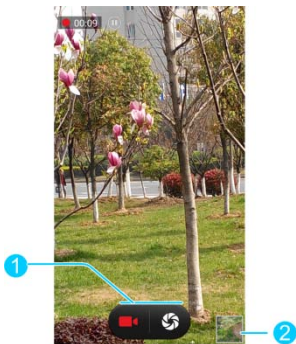 
Number	Function
1	Capture a photo.
2	Change the camera settings.
3	View photos and videos you have captured.
4	Switch between the front camera and the back camera.
5	Switch the flash.
6	Select the camera mode.

Touch the area where you want the camera to focus. Green brackets appear around the focused area.



Lightly touch the button .

## Recording a Video

1. Touch  in the Home Screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.




Number	Function
1	Start or stop recording a video.
2	View photos and videos you have captured.

3. Touch  to start and  to stop recording.

# Gallery

## Opening Gallery

Touch  in the Home Screen and select **Gallery** to view albums of your pictures and videos.


## Working With Albums

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums.


### **To view album contents:**

Touch an album to view the pictures and videos it contains.


### **To share albums:**

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to share.
3. Touch  at the top of the screen and select how you want to share the albums.

### **To view details of an album:**

1. Touch and hold an album until it is selected.
2. Touch  > **Details**.

## To delete albums:

1. Touch and hold an album until it is selected.
2. Touch **Options**  > **Delete** > **OK**
3. Select multiple albums if required to delete more than one.

## Working With Pictures

Touch a picture in an album to view the picture in full screen. Double-touch the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.





Touch the **Options** to delete the picture, browse the album contents in a slideshow, rotate the picture, view picture file detail, set it as contact icon or wallpaper, or edit it.

**NOTE:** All options may not be available for certain albums or pictures.

## Retouch Your Pictures


You can edit any photos you took and some other pictures in **Gallery**. The changed picture is saved in the **Edited** album, while the original image is never affected.

1. Touch the **Options > Edit** while viewing a picture in full screen to open the Edit interface.
2. Touch the icons along the bottom of the screen to edit the picture.

	Apply colour effects such as None, Punch, Vintage, B/W, Bleach, Instant, Latte, Blue, Litho, X Process.
	Apply effects various outline borders.
	Straighten, Crop, Rotate, or Mirror the picture.
	Autocolor, Exposure, Vignette, Contrast, Shadows, Vibrance, Sharpness, Curves, Hue, Saturation, BW Filter.


3. To undo or redo the changes you've made to the picture, touch the **Options**.
4. Touch **SAVE** to save the new picture to the **Edited** album.

## Share Your Pictures

1. Touch an album in the gallery and then touch a picture.
2. Touch  at the top of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the picture.


## Working With Videos

### Play Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the centre to start playing.


Touch the video to view the playback controls.

### Share Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the top of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the video.



# Music

Touch  in the Home Screen and select **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## Copying Music Files to Your Phone

Before using Music, you need to copy audio files from your computer to your phone's memory card.

### Copy From a Computer

1. Connect your phone and the computer with a USB cable.
2. Touch **Media device (MTP)** (if supported on the PC) or **Camera (PTP)** to browse the files on the phone storage and the microSD card.
3. Copy the music file from the PC and paste it to the phone storage or microSD card.

### Download From the Internet

You can download music files when browsing web pages. See

[Downloading Files.](#)

## Receive via Bluetooth

You can receive music files from other devices via Bluetooth.


See [Receive Data via Bluetooth.](#)

## Receive via Wi-Fi

You can receive music files from other devices via Wi-Fi. See

[Receive Data via Wi-Fi.](#)

## Viewing Your Music Library


Touch  in the Home Screen and select **Music** and your music library is displayed. All your audio files are catalogued, according to the information stored in the files.

Touch the tabs at the top of the screen to view your music library organized by **Artists**, **Albums**, **Songs**, or **Playlists**.

**NOTE:** If an audio file is being played, its summary information is displayed at the bottom of the screen. Touch the summary area to open the playback screen.

## Set a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see [\*People – Editing Contacts – Set a Ringtone for a Contact\*](#)).


1. Touch  in the Home Screen and select **Music** to see the music library.

**NOTE:** If you are in the playback screen, touch the **Options > Library** to return to the music library.

2. Touch and hold a song in any list.
3. In the menu that opens, touch **Use as phone ringtone**.

**TIP:** If the song is being played, you can touch the **Options > Use as ringtone** in the playback screen.

## Delete a Song

1. Touch  in the Home Screen and select **Music** to see the music library.

 
**NOTE:** If you are in the playback screen, touch the **Options > Library** to return to the music library.

2. Touch and hold a song in any list.

3. In the menu that opens, touch **Delete > OK**.

## Playing Music

Touch a song in the music library to listen to it. The following playback screen appears.

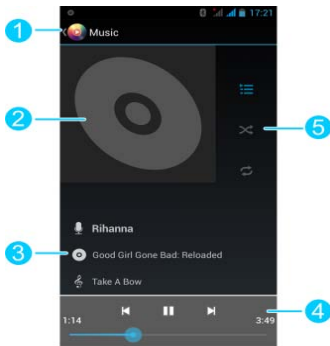

Number	Function
1	Touch to return to the library.
2	Album artwork.
3	Song and artist names.

4	Playback control. Skip songs, pause and resume playback. Drag the progress bar to jump to any part of the song.
5	Touch to see the current playlist (queue), Shuffle, or Repeat.

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

### Create a Playlist

1. Touch and hold a song in the music library.
2. In the menu that opens, touch **Add to playlist**.
3. Touch **New**.
4. Type the playlist name and touch **Save**.


The playlist is created and the song you selected is added to the playlist.

### Add a Song to a Playlist

1. Touch and hold a song in the music library.
2. In the menu that opens, touch **Add to playlist**.

3. Touch the name of the playlist you want the song added to.

**TIP:** You can rearrange the songs in the playlists you created.

Open the playlist and touch and hold  in front of a song.

Drag up or down to change its order in the playlist.

## Remove a Song From a Playlist

1. Open a playlist.
2. Touch and hold a song, and touch **Remove from playlist**.

## Delete or Rename a Playlist


1. Touch the **Playlists** tab in the music library to see all the playlists.
2. Touch and hold a playlist.
3. Touch **Rename** or **Delete** in the menu that opens.

**NOTE:** These options may not be available for certain automatically created playlists, such as **Recently added**.

# Video Player


Use the video player to play various kinds of videos.

## Opening the Video Library

Touch  in the Home Screen and select **Video Player** to view your video library.

## Playing and Controlling Videos

Touch a video in the video library to play it. Rotate the phone on its side to watch the video in landscape view.


Touch the video to show the playback controls. You can pause and resume the playback, or jump to any part of the video. You can also exit the video by touching  at the top left of the screen.

## Managing Video Files

**To delete videos:**

1. Touch and hold a video in the video library.
2. Touch **Delete > OK**.

### **To share videos:**

1. Touch a video in the video library.
2. Touch  at the top right of the screen and select how you want to share them.

### **To view details of a video:**



1. Touch and hold a video in the video library.
2. Touch **Details**.



# FM Radio


With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset that comes with your phone works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.


## Search Channels

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch the  > **Search**.



**NOTE:** The first time you open **FM Radio**, you phone scans for all available channels and saves them automatically.

## Listening to FM Radio

1. Plug a wired headset into your phone.
2. Touch  in the Home Screen and select **FM Radio**.
3. Touch one of the favourite channels at the bottom.

**TIP:** Touch the  > **Speaker** to listen to the radio programs through the phone speaker.

## Adding a Radio Station to Favourites

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch the .

The new channel is added to the favourite channels, which are sorted in numeral order.

## Other Options and Settings

**To remove a channel from favourites:**

1. Touch the channel you want to remove from favourites.
2. Touch the **Remove from favourites > OK**.





**To turn off FM radio immediately:**

Touch  at the top left of the screen.

# Sound Recorder

**Sound Recorder** enables you to record voice memos and listen to them whenever you like.

## Recording a Voice Memo



1. Touch  in the Home Screen and select **Sound Recorder**.
2. Touch  to start recording. Touch  to pause recording .
3. Touch  to stop recording and touch **Save** to save the record.

# More Apps

## Alarm

Set alarms or turn the phone into a bedside clock.

### Set a New Alarm

1. Touch  in the Home Screen and select **Clock**.
2. Touch .
3. Touch a default alarm to configure it, or touch **+** at the top of the screen to create a new alarm.
4. Set up the alarm options, such as time, repeat, and ringtone.
5. Touch the **Back Key** to save and exit.


## Calculator

Touch  in the Home Screen and select **Calculator**.

**TIP:** Touch **Options > Advanced panel/Basic panel** to switch between different panels.

## Downloads

The **Downloads** app keeps a record of the files you have downloaded using the **Browser**, **Email**, or **Gmail** app.

Touch  in the Home Screen and select **Downloads** to check the record.

- Touch a file to open it with the appropriate applications.
- Touch and hold a file, or check the box in front of it, to delete or share it.


## File Manager


Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

Touch  in the Home Screen and select **File Manager**.

Touch the folder name at the top of the screen to switch between the memory card storage and the phone storage.

## NoteBook

Touch  in the Home Screen and select **NoteBook** to save and view your text notes.

Touch  to create a new note. Then enter your text and

touch **DONE** to save it.

Touch a note to view its entire content. You can also delete it, share it, or change its title.

## YouTube

Touch  in the Home Screen and select **YouTube**.

You can watch YouTube videos or upload your own.

# Play Store


There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, make sure that you have signed in to your Google account.

**NOTE:** The content you can access in the Play Store depends on your region and your service provider.

1. Touch the **Home Key** >  > **Play Store**.



The first time you launch **Play Store**, accept the Google Play Terms of Service.

2. Find the apps you need either by category or by touching .
3. Touch the app to see detailed description.
4. Touch **Install** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method.

**CAUTION:** Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch


**Accept & download** (free apps) or **Accept & buy** (paid apps) to proceed, or touch the **Back Key** to cancel.

5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .



# Settings

Touch  in the Home Screen and select **Settings**. The **Settings** app contains most of the tools for customizing and configuring your device.

## Wireless and Networks

### SIM management

Viewing SIM information and setting the SIM cards.

### Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. See [Connecting to Networks and Devices – Connecting to Wi-Fi](#).

### Bluetooth

Turn Bluetooth on or off and configure your Bluetooth connections. See [Connecting to Networks and Devices – Connecting to Bluetooth Devices](#).

### Data Usage

You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what

apps have been using mobile data, or restrict background data for individual apps.

## Flight Mode

In the **Settings** app, touch **More** under Wireless & networks and check **Flight mode**. All the phone's radios that transmit voice or data are turned off.

## VPN

Set up and connect to virtual private networks. See [Connecting to Networks and Devices – Connecting to Virtual Private Networks](#).

## Tethering and Portable Hotspot

Share your phone's mobile data connection with PCs or other devices via USB or Wi-Fi. See [Connecting to Networks and Devices – Sharing Your Mobile Data Connection](#).

## Mobile Networks

Control mobile data use, select mobile network and set access point names. See [Connecting to Networks and Devices – Connecting to Mobile Networks](#).

# Device

## Audio profiles

Set the default profiles and sound mode.

## Display

- **Scenes:** Set default scene.
- **Theme:** Select the theme.
- **Wallpaper:** Select a background image for the Home Screen.
- **Auto-rotate screen:** Select the auto-rotate screen or not.
- **Brightness:** Set the brightness of the display.
- **Daydream:** Set the Clock, Colours, Photo Frame and Photo Table.
- **Font size:** Set the font size of the text on the screen.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Wireless display:** Turn on/off the wireless display.

## Storage

Check memory information for your memory card and internal storage.

- **Erase Phone storage:** Erase all data on the Phone storage, such as music and photos.
- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase SD card:** Erase all data on your memory card and prepare it for use with your phone.

## Battery

Check how much power remains for the battery and what has been using the battery.

## Apps

Touch an app in the **DOWNLOADED**, **PHONE STORAGE**, **RUNNING**, or **ALL** tab to see its information. You can stop or uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.

**NOTE:** Not all applications can be moved or uninstalled.

## Accounts

### Accounts

Manage your accounts and synchronization settings.

- Touch **ADD ACCOUNT** to sign in to or create accounts on your phone.
- Touch an account to set the sync settings for that account. You can then touch the **Options > Sync now** to sync all checked items.
- Touch an account and then touch the **Options > Remove account** to remove the account and all information related to it from your phone.

## Personal

### Location access

Select **Wi-Fi & mobile network location** to improve Google search results and other services using your location information.

## Security

- **Screen lock:** Lock the screen with press, pattern, PIN, or password. See [Personalizing – Protecting Your Phone With Screen Locks.](#)
- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect your privacy. See [Personalizing – Protecting Your Phone With Encryption.](#)
- **Set up SIM card lock:**
  - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the SIM card.
  - ▶ **Change SIM PIN:** Change the PIN used to access the SIM card.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation

of apps from sources other than the Play Store.

- **Verify apps:** Disallow or warn before installation of apps that may cause harm.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

## Language and Input

- **Language:** Select a language and region for your system.
- **Spell checker**
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. See [Knowing the Basics – Entering Text – Touch Input Settings](#).
- **Voice Search:**
  - ▶ **Language:** Select the language you use when entering

text by speaking or searching by speaking.

- ▶ **Speech output:** Select **Always**, **Informative only** or **Hands-free only**.
- ▶ **Block offensive words:** Replace offensive words with an asterisk (\*) when you use Google voice recognition to transcribe your voice into text.
- ▶ **Bluetooth headset:** Records audio through Bluetooth headset if available.
- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.



## Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Backing up to debug-only private cache.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.

## System

### Date and Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

### Scheduled power on and off

Set scheduled power on and off.

## Accessibility

Configure accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

## Developer Options

**Developer options** contains settings that are useful when developing Android applications.

## About Phone

View phone status and legal information. You can also upgrade your phone system from update packages copied to the storage card.

## Upgrading the Phone Software

There are several ways to upgrade your phone software:

1. Use the online upgrade tool for mobile terminal products.
2. Use the one-press upgrade package offered by your mobile service provider.
3. Use the upgrade package on your microSD card.

**NOTE:** Visit ZTE official handset service support website (<http://zte.co.nz>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

# Troubleshooting




If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signalling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
(U)SIM card error	(U)SIM card malfunction or damage.	Take the (U)SIM card to your service provider for testing.
	(U)SIM card inserted improperly.	Insert the (U)SIM card properly.
	Debris on the (U)SIM card contacts.	Use a soft, dry cloth to clean the (U)SIM card contacts.
Unable to connect to the network	(U)SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Cannot answer incoming calls	You have activated the <b>Call barring</b> feature.	Go to  > <b>Options &gt; System settings &gt; Voice Call &gt; Call barring</b> , and then select <b>Cancel all</b> .
You cannot make outgoing calls.	You have activated the <b>Call barring</b> feature.	Go to  > <b>Options &gt; System settings &gt; Voice Call &gt; Call barring</b> , and then select <b>Cancel all</b> .
	You have activated the <b>Fixed dial numbers</b> feature.	Go to  > <b>Options &gt; System settings &gt; Other</b> and disable it.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the (U)SIM card's PUK code, use the PUK code to unlock the (U)SIM card.
Unable to enter information into the phonebook	The phonebook's memory is already full.	Delete unnecessary data from the contacts.



<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
		Enter safety mode and uninstall the software that may cause the problem.
		Upgrade the phone software.


# Technical Specifications





<b>Network</b>	3G UMTS 850, 2100 MHz. 42 Mbps data. 2G GSM 900, 1800, 1900 MHz
<b>Dimensions</b>	Approx 133 x 66 x 10 mm. 160g
<b>Features</b>	5.0/0.3MP dual cameras. 854x480px, 4.5" capacitive touch display MMS, Email, Speakerphone, Voice Recorder, 3.5mm audio jack, FM Radio. Accelerometer, A-GPS. 2.0GB internal user memory, expandable to 32GB microSDHC.
<b>Connectivity</b>	Wi-Fi 802.11 b/g/n Bluetooth 4.0
<b>Battery</b>	2000mA hours, Lithium ion (Li-ion)
<b>Standby time*</b>	Up to 300 hours
<b>Talk time*</b>	Up to 10 hrs talk time

<b>Charge time</b>	Approximately 2-3 hours
<b>Battery Life</b>	Approximately 400 charge cycles

# For Your Safety

## General Safety

	Don't make or receive calls while driving. Never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Avoid contact with liquids. Keep your phone dry.

	Turn off when asked to in hospitals and medical facilities.		Don't take your phone apart.
	Turn off when told to in aircrafts and airports.		Only use approved accessories.
	Turn off when near explosive materials or liquids.		Don't rely on your phone for emergency communications.

## Other Info

- The phone's normal operating temperature is 0°C ~ 40°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
  - Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.
- 
- **CAUTION** : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
  - The device complies with RF specifications when the device used at 1.5 cm from your body.

## Adapter

1. Adapter shall be installed near the equipment and shall be easily accessible.
2. Model: STC-A51-I.
3. Manufacturer: Ruide.

The plug is considered separate to the adapter.

## Radio Frequency (RF) Exposure

### General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

### Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.260 W/kg\*.

## **Body Worn Operation**

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radio Frequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

## Product Handling

### General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.



- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or accessories to open flames or lit tobacco products.
- Do not expose your phone or accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose or use your phone or its accessories in a environment with or that can reach extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Do not place your phone inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.

- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Normal Use Position**

When placing or receiving a phone call be careful not to block the microphone port with your hand. Do not shield the device which can affect call quality:

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

## **Seizures/Blackouts**

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Never puncture the surface of the battery with sharp objects.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## **Radio Frequency Interference**

### **General Statement on Interference**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

#### **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing

the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Turn off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## Explosive Environments

### **Gas Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

## Disposal of Your Old Device

Phones can be left in recycle bins located in Telecom stores and offices nationwide.